


Harness passes through open hole.

Cut wire goes into closed off hole.

Scotchlok connector

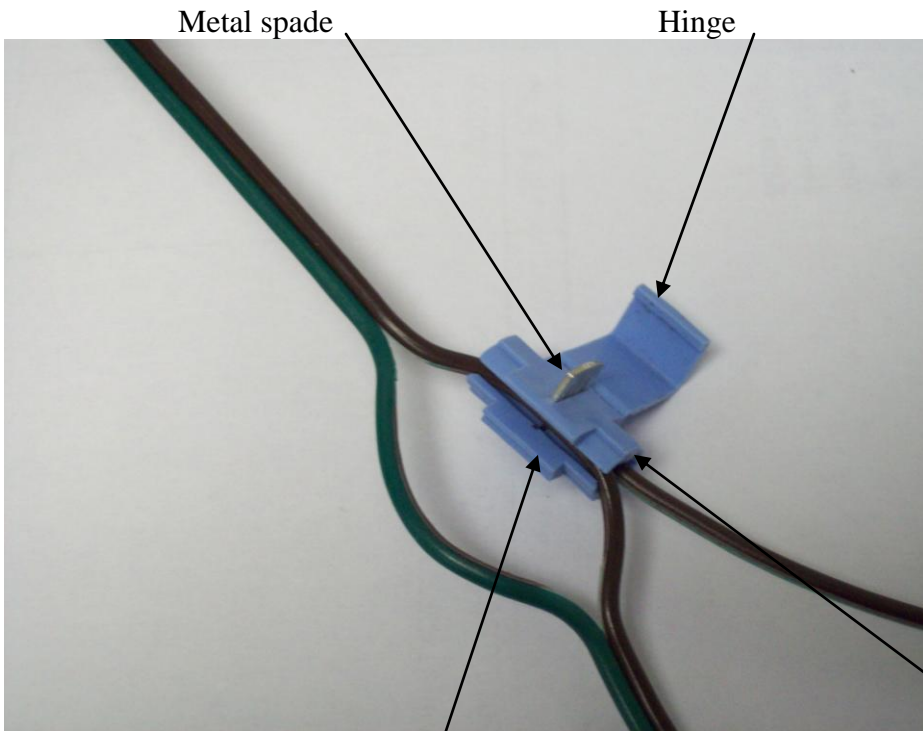


Metal spade


Hinge

Harness shown passing through open slot.

Cut wire from side light in closed section.

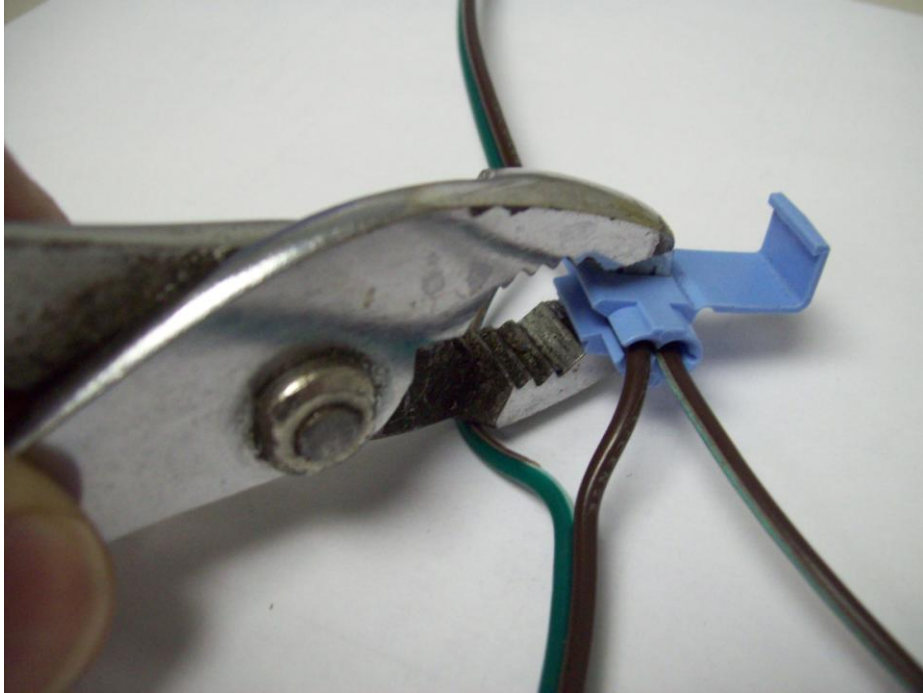

Use pliers to push the metal spade down until it is flush with plastic. This is what makes the electrical connection between the two wires.

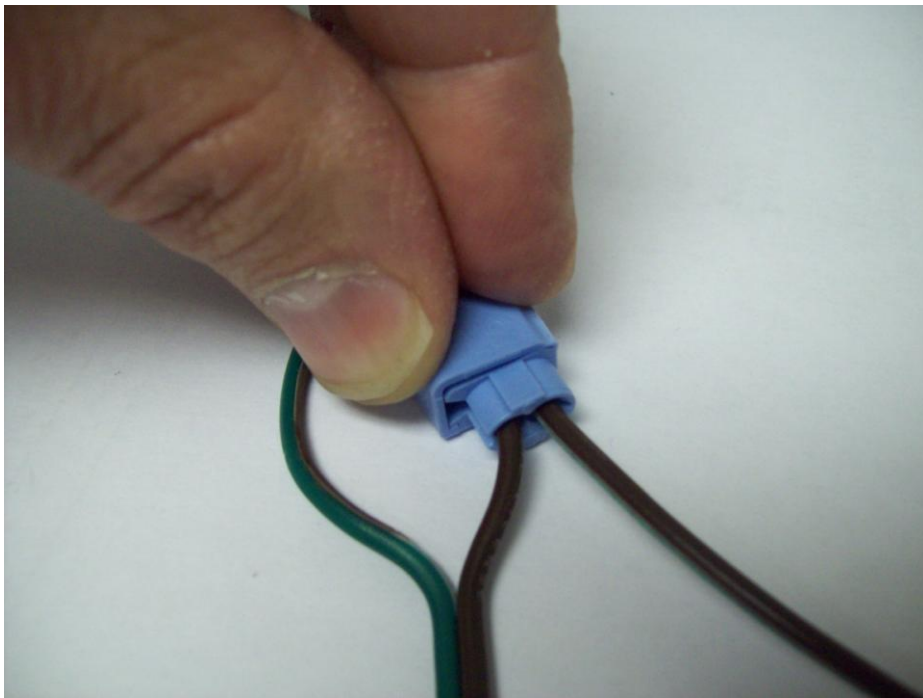

KJM 11/10/10

Close the hinge cover on the connector, this finishes the process. This illustration is used in the next step for wiring the side marker lights.